

HAGMANN

precise • flexibel • reliable

Heat sealing– and blister cutting machines

for MedTec, pharmaceutical and watchmaking industry



MEDIMAT

#first-class and comfortable




FIRST-CLASS because:

- **PROCESS MONITORING** permanent and independent
- **VALIDATED SOFTWARE**
- **7" TOUCH SCREEN** color display
- **INDIVIDUAL LOGINS** within 4 user groups
- **PROGRAM MEMORY** for up to 200 recipes
- **REMOTE ACCESS** for remote maintenance
- **COMPLETE INOX-SURFACE**
- **HEAT-UP TIME** <7 minutes (120°C)
- **MINIMUM TOLERANCES**
for the process relevant parameters

COMFORTABLE because:

- **90° ROTATABLE SEALING HEAD**
for easy cleaning of the sealing plate and
for quick tool change
- **ELECTRICALLY OPERATED DRAWER**
with 7 different speed levels
- **INTEGRATED DRAWERS FOR STORAGE**
of the sealing tools in the underframe
- **EASY MAINTENANCE ACCESS**

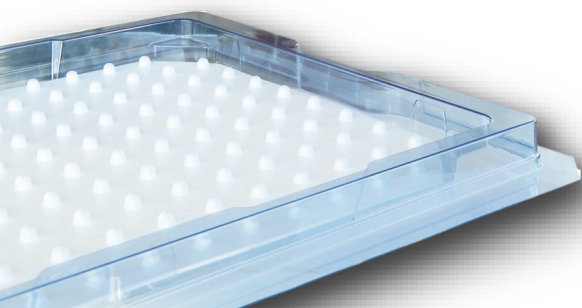

**Qualifiable (DQ / IQ / OQ / CSV)
with redundant
parameter monitoring**

OPTIONS:

- Complete qualification
incl. documentation DQ/IQ/OQ
- Blister lifting system
- Automatic tool recognition
- Vacuum
- Audittrail
- Gas flushing
- Data interface
- Barcode reader
- Quick clamping system

POWER PACKER

#high quality and compact



HIGH QUALITY because:

- **PROCESS MONITORING** permanent and independent
- **VALIDATED SOFTWARE**
- **7" TOUCH SCREEN** color display
- **INDIVIDUAL LOGINS** within 4 user groups
- **PROGRAM MEMORY** for up to 200 recipes
- **REMOTE ACCESS** for remote maintenance
- **COMPLETE INOX-SURFACE**
- **HEAT-UP TIME** <7 minutes (120°C)
- **MINIMUM TOLERANCES**
for the process relevant parameters
- **AUTOMATIC SEAL PLATE CHANGE**

COMPACT because:

- **MAXIMUM PERFORMANCE IN THE SMALLEST SPACE AND HIGHEST QUALITY**
Cleanroom compatible



**Qualifiable (DQ / IQ / OQ / CSV)
with redundant
parameter monitoring**

OPTIONS:

- Complete qualification
incl. documentation DQ/IQ/OQ
- Automatically driven drawer
instead of a hand drawer
- Audittrail
- Data interface
- Barcode reader
- Trolley with drawers
for the storage of the sealing tools

FOLIOMAT

#simple and resistant



FOLIOMAT in the colour of your choice

SIMPLE because:

- **PLUG & PLAY**
easiest installation
- **PURELY ELECTRICALLY OPERATED**
no compressed air required
- **EASY OPERATION**
with touch screen
- **QUICK FORMAT CHANGE**
< 30 seconds

RESISTANT because:

- **PROVEN SINCE 35 YEARS**
is this machine type with this basic construction
in use by our customers

OPTIONS:

- Tool shelf
- Film dispenser



**Large selection of
Standard blister**



FOLIOMAT classic in INOX

AT A GLANCE

#clear and informative



| | MEDIMAT fist-class and comfortable | POWER PACKER high quality and compact | FOLIOMAT simple and resistant |
|---|--|--|---|
| Usable sealing surface | 550x350 mm Model XL 800x350mm | 420x350mm | 270x270mm |
| Blister depth | max. 130mm | max. 110mm | max. 95mm |
| Possibility of sealing/ welding bags | Yes | Yes | No |
| External dimensions | 890x1200x1800mm | 600x650x700mm | 330x560x350mm |
| Weight | 480kg | 200kg | 35kg |
| Sealing force | 10-70kN | 10-24kN | 4-12kN |
| Sealing temperature | 90-170°C Optional up to 250 °C | 90-170°C | 90-170°C |
| Sealing time | 1.5-9.9s | 1.5-9.9s | 1.0-9.9s |
| Qualification | Yes | Yes | No |
| Independent parameter monitoring | Yes | Yes | No |
| Electrical connection | 3x400VPNE 50/60Hz max. 8 kW Protection 16A | 3x400VPNE 50/60Hz max. 8 kW Protection 16A | 230VPNE 50/60Hz max. 2kW |
| Compressed air supply | 6-8 bar | 6-8 bar | not used |

SOLID CUTTING PRESS

#powerful and precise



POWERFUL because:

- **IN ONE STROKE**
a whole blister sheet can be cutted
- **PUNCHING FORCE**
700kN

PRECISE because:

- **CUTTING TOLERANCES < +/- 0.2 mm**
for highest repeatability
- **MAXIMUM CUTTING AREA**
760x400mm

WHY HAGMANN TEC LTD.?

- #Your requirements are our motivation*
- #Many years of experience and continuous development*
- #Behind Hagmann is a young, motivated and highly qualified team*
- #We are precise, flexible and reliable 😊*
- #100% Swiss Made*

Our Site:



Hagmann Tec Ltd.

Bohnackerweg 6
CH - 2545 Selzach

Phone +41 32 641 66 41

info@hagmann-tec.com / www.hagmann-tec.com



Swiss Made

